


FLEXIBLOK[®] Solenoid Quick Exhaust Valve

S14E, S22E, S32E, S42E Series

- Four convenient sizes
- Lockout feature (located in slide valve) prevents unauthorized pressurization of system (22, 32, and 42 Series)
- Standard manual override
- Low-wattage coil
- High exhaust capacity for quick depletion of pressure
- High inlet to outlet flow capability
- Connects easily to **FlexiBlok[®]** Modular system

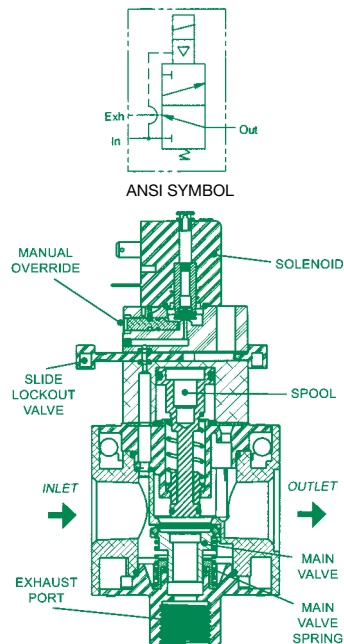

Specifications

| | 14 Series | 22 Series | 32 Series | 42 Series |
|---------------------------|------------------|------------------|------------------|--------------------|
| Exhaust Ports NPTF | 1/2 | 1/2 | 1/2 | 3/8 (3 exh. ports) |
| Gauge Ports NPTF | 1/8 | 1/8 | 1/4 | 1/4 |
| Temperature Range °F (°C) | 40-120 (4-50) | 40-120 (4-50) | 40-120 (4-50) | 40-120 (4-50) |
| Min. Pressure PSI (BAR) | 60 (4) | 60 (4) | 60 (4) | 20 (1.38) |
| Max. Pressure PSI (BAR) | 150 (10) | 150 (10) | 150 (10) | 150 (10) |
| Weight lbs. (kg) | 0.94 (0.43) | 0.94 (0.43) | 1.56 (0.71) | 4.35 (1.97) |
| Body Material | Zinc | Aluminum | Aluminum | Aluminum |

| Series | In/Out | CV | |
|----------------|--------|--------|-------------|
| | | In/Out | Out/Exhaust |
| 14 Series, 1/4 | 1.55 | 1.10 | |
| 22 Series, 1/4 | 2.0 | 1.2 | |
| 22 Series, 3/8 | 2.87 | 1.38 | |
| 22 Series, 1/2 | 3.62 | 1.38 | |
| 32 Series, 1/2 | 5.24 | 3.01 | |
| 32 Series, 3/4 | 6.47 | 3.14 | |
| 42 Series, 1 | 8.0 | 5.0 | |

How to Order

Solenoid Quick Exhaust Valve

Model _____ **S 22 E - 04 B EGLM**

S = Solenoid Quick Exhaust

Series _____

14
22
32
42

Style _____

E = Solenoid Quick Exhaust Valve

Threads _____

- = NPTF

Options

E = 110V AC 50/60 Hz
G = Gauge
K = 24V DC Coil
L = Plug with Light
M = Muffler

Revision Level

B

Port Size

02 = 1/4 (14 and 22 Series)
03 = 3/8 (22 Series)
04 = 1/2 (22 or 32 Series)
06 = 3/4 (32 Series)
08 = 1 (42 Series)